

DOORMINATORTM USA

MADE BY Telpro Inc.[®] PATENTS PENDING GRAND FORKS ND

The Door Handler

Allows one person to install and remove solid core doors. Works on doors up to 4' wide and 7' high. The DoorminatorTM loads easily and will roll through the doorway for installation. The DoorminatorTM is fully adjustable: tilts forward - backwards, side to side, and raises up and down, in order to align door with the jamb.



MODEL 3070

Max. Load: 160 lbs. (72 kg) • Max. Door Height 7' (213 cm) • Max. Door Width 4' (121.9 cm)

Telpro Inc.[®]

Call 1-800-448-0822

Fax 1-800-474-9993

E-mail telpromktg@telproinc.com

More Info coming soon at

www.doorminator.com



1

Position Doorminator™ in front of door.



2

Door Hooks
Door Support Shoe

Load the door on the door support shoe and secure with door hooks.



3

Tilt Handle

With the Tilt Handle down the Doorminator™ will roll through the door opening.



4

Align bottom corner of door with bottom corner of door jamb.



5


Adjust Doorminator™ so that the door is parallel with the jamb and hinges align.



6

Push Away

Fasten hinges to jamb or Door. After hinges are secured push door away from Doorminator™

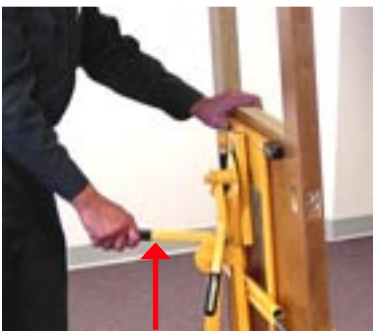

The **Tilt Handle** will adjust the door forward (4°) and backwards (12°) on either side of plumb.

Special Features



The **Floor Plate** moves out to support the door when in plumb or past plumb position.

The **Back Leg** folds for transportation and storage.

The **Lift Handle** will lift the Door from 1/4th of an inch to 2 inches off the floor.

The **Door Hooks** are spring loaded and can accommodate doors from 28" to 48" wide.



The **Side Tilt Adjustment Wheel** adjusts the door from Right (2°) to left (2°) on either side of plumb.

